


PKK 501



video




PDF

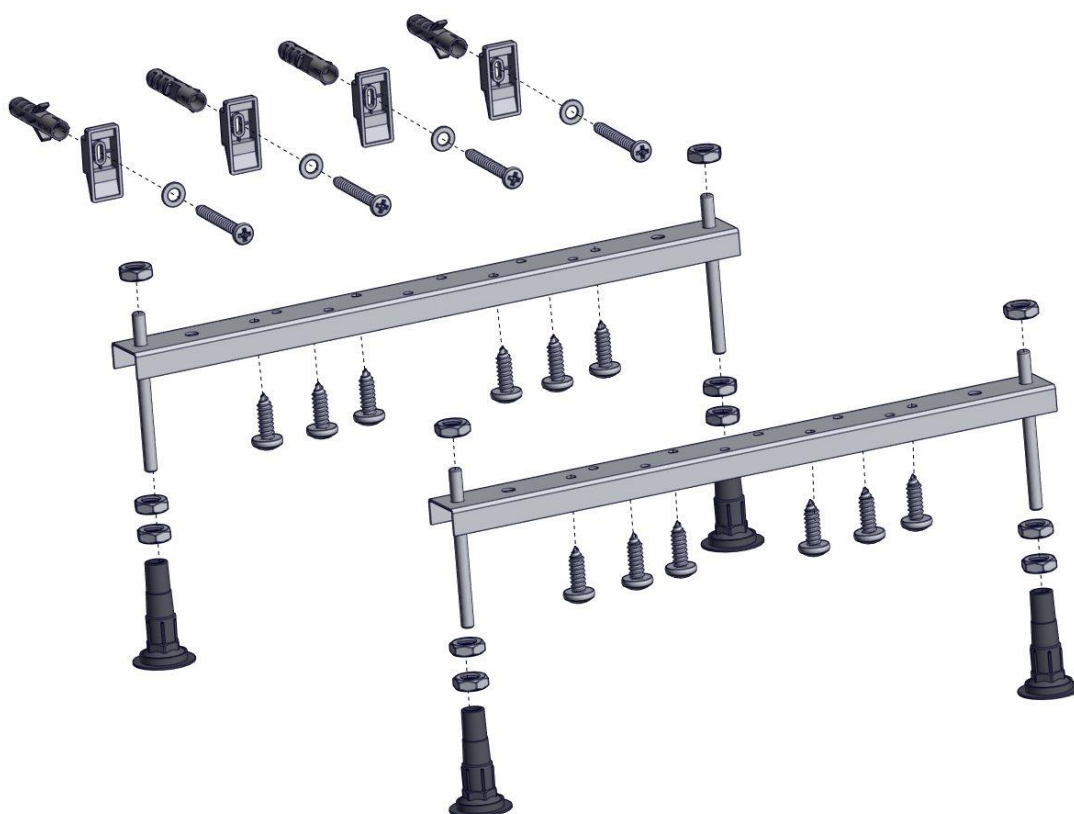


- SI** Podnožje kopalne kadi PKK 501 – navodilo za montažo
- HR** Podnožje za kadu PKK 501 – upute za montažu
- SRB** Podnožje za kadu PKK 501 – uputstvo za montažu
- MK** Подножје на када PKK 501 – упатства за монтажа
- RU** Основание ванны PKK 501 – инструкция по монтажу
- UA** Основа для ванни PKK 501 – інструкція зі збирання
- HU** PKK 501 fürdőkádtalp – összeszerelési útmutató
- RO** Bază PKK 501 pentru cadă de baie – instrucțiuni de asamblare
- GB** PKK 501 bathtub base – assembly instructions
- DE** PKK 501 Wannenfüße – Aufbauanleitung
- IT** Base vasca da bagno PKK 501 – istruzioni di montaggio
- FR** Support pour baignoire PKK 501 – instructions de montage


kolpa·san
by KOLPA

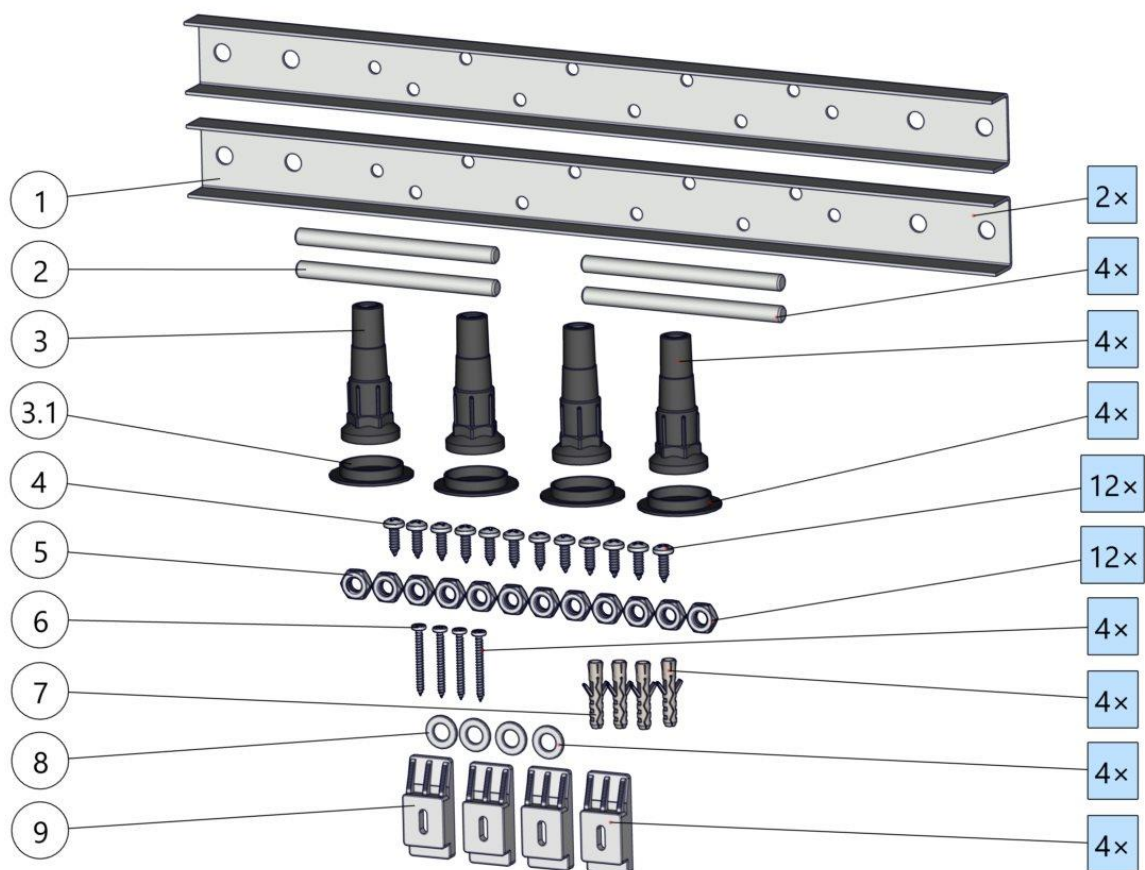


1

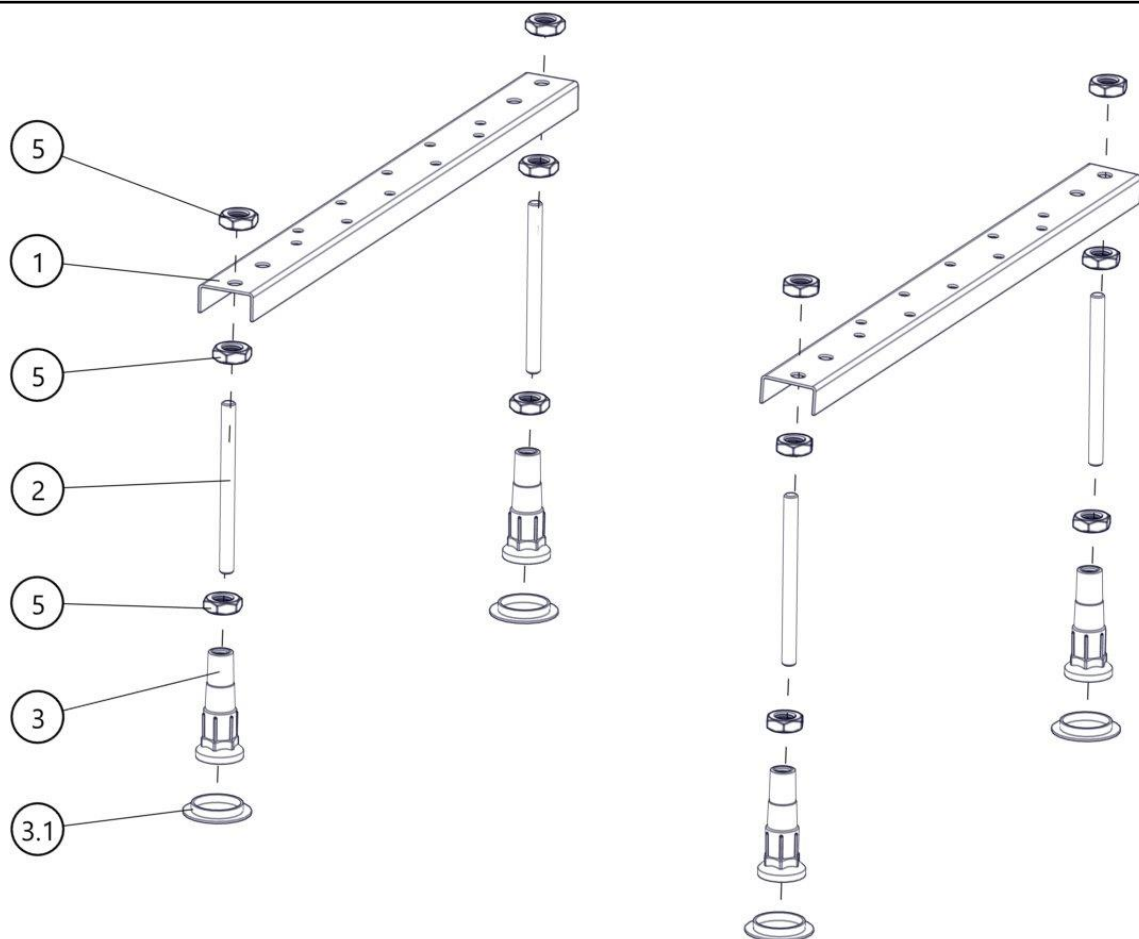


2

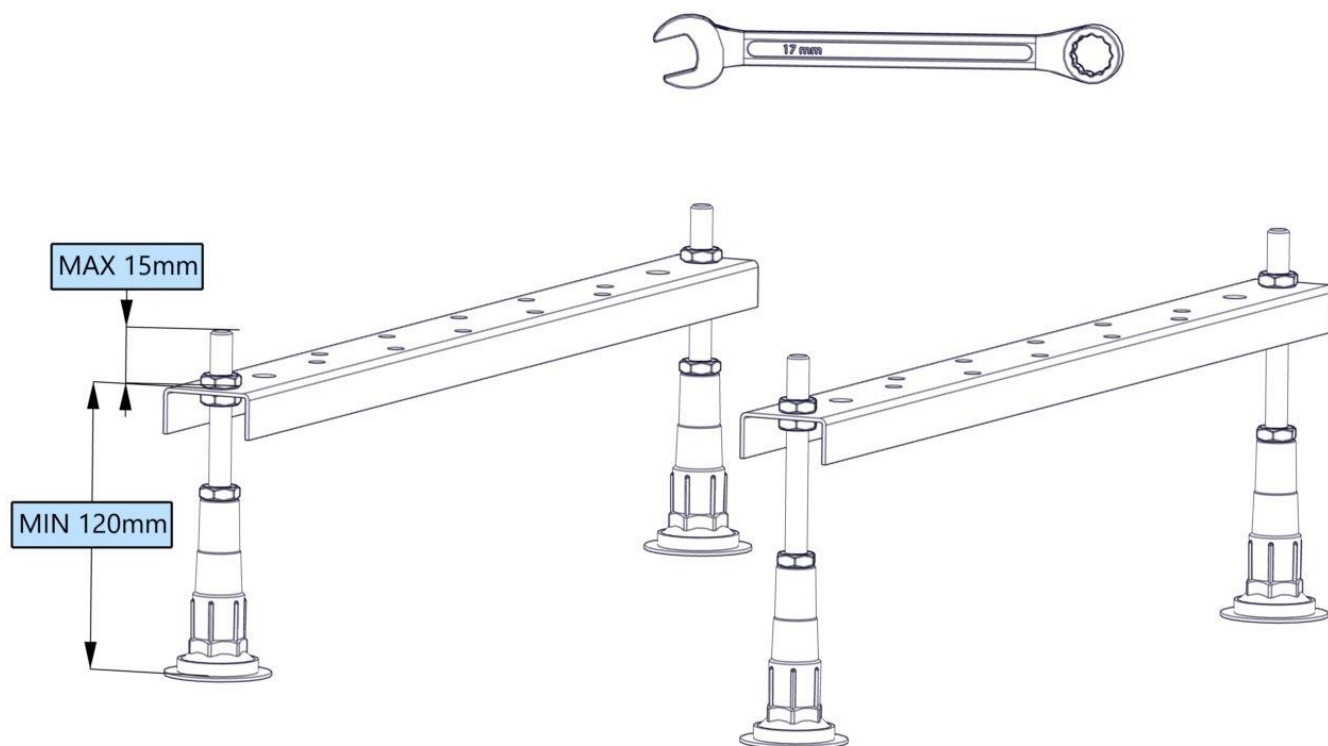


3A

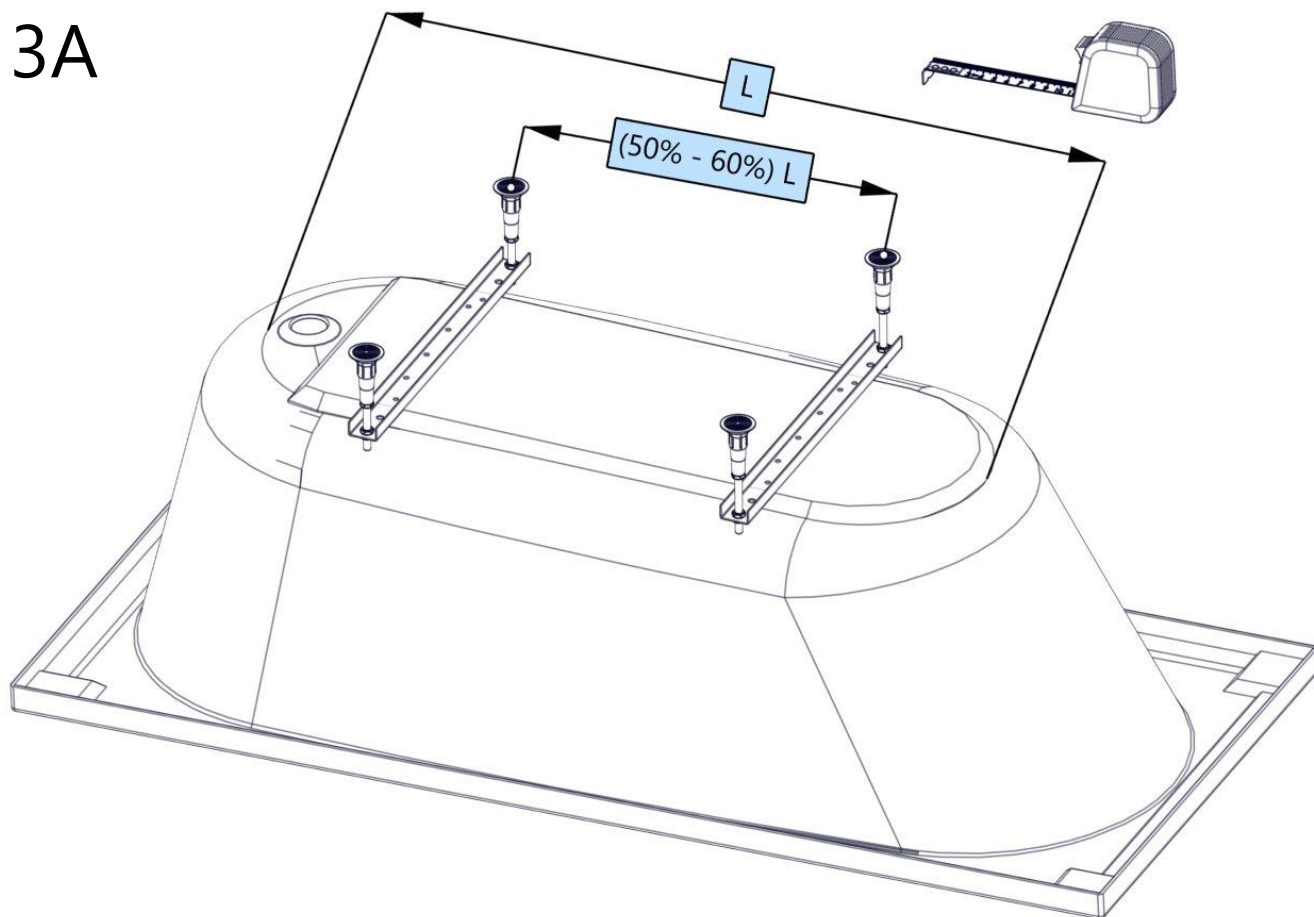


3B

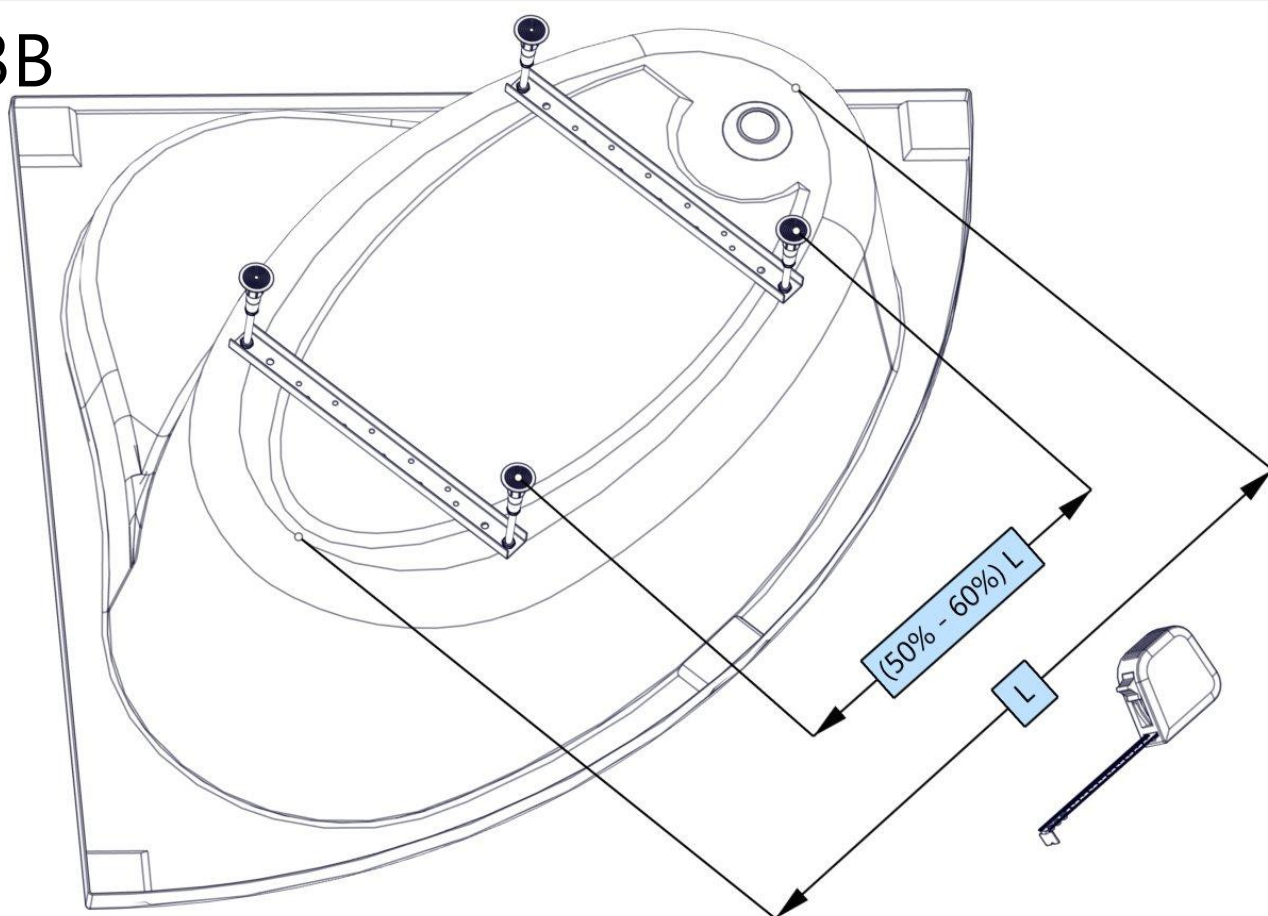


4

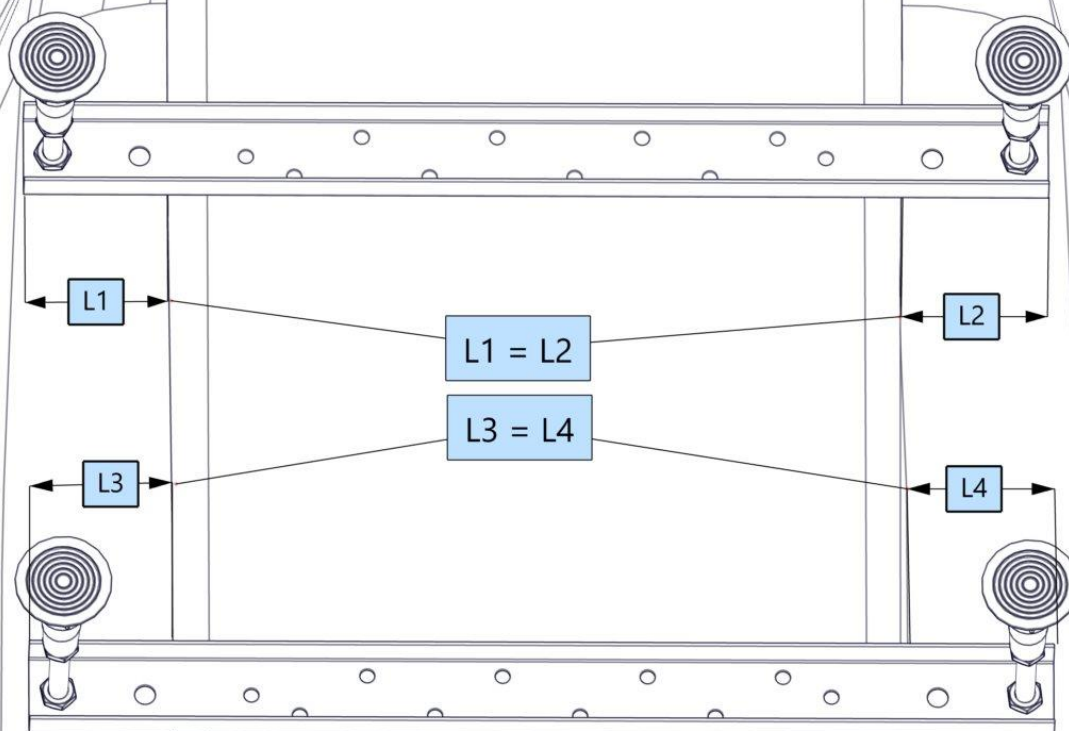


5

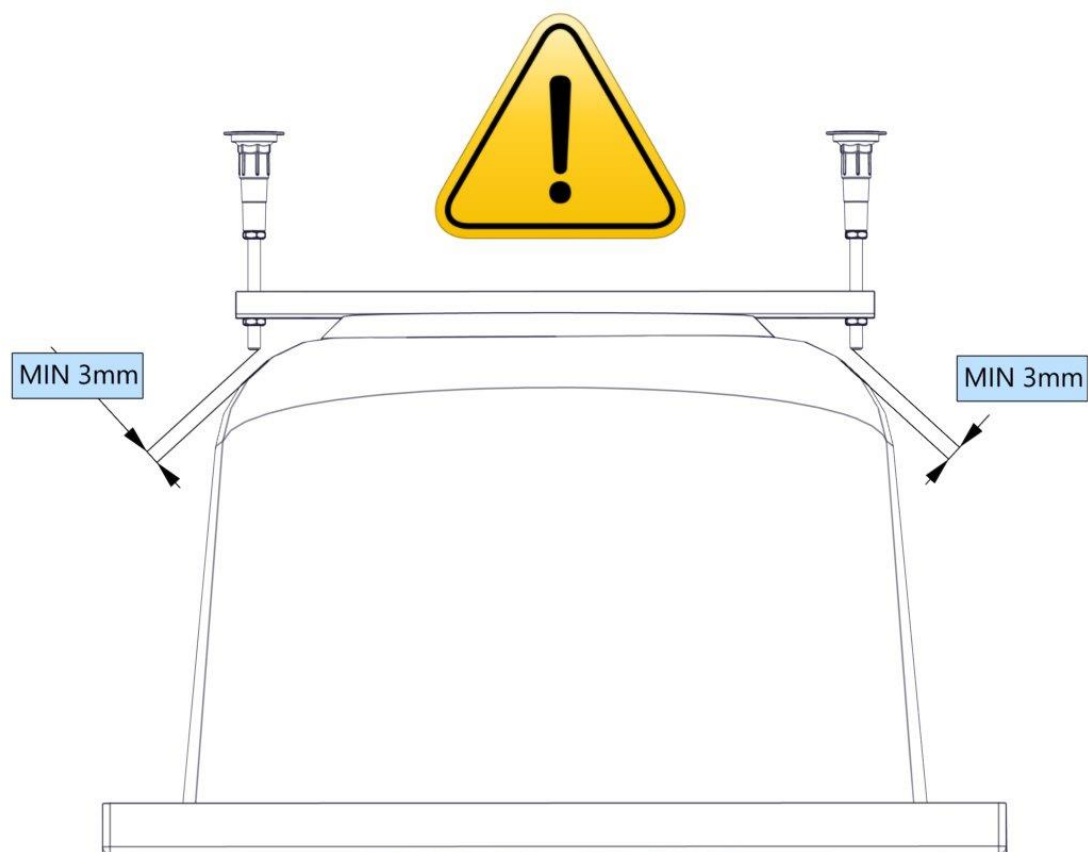


6A

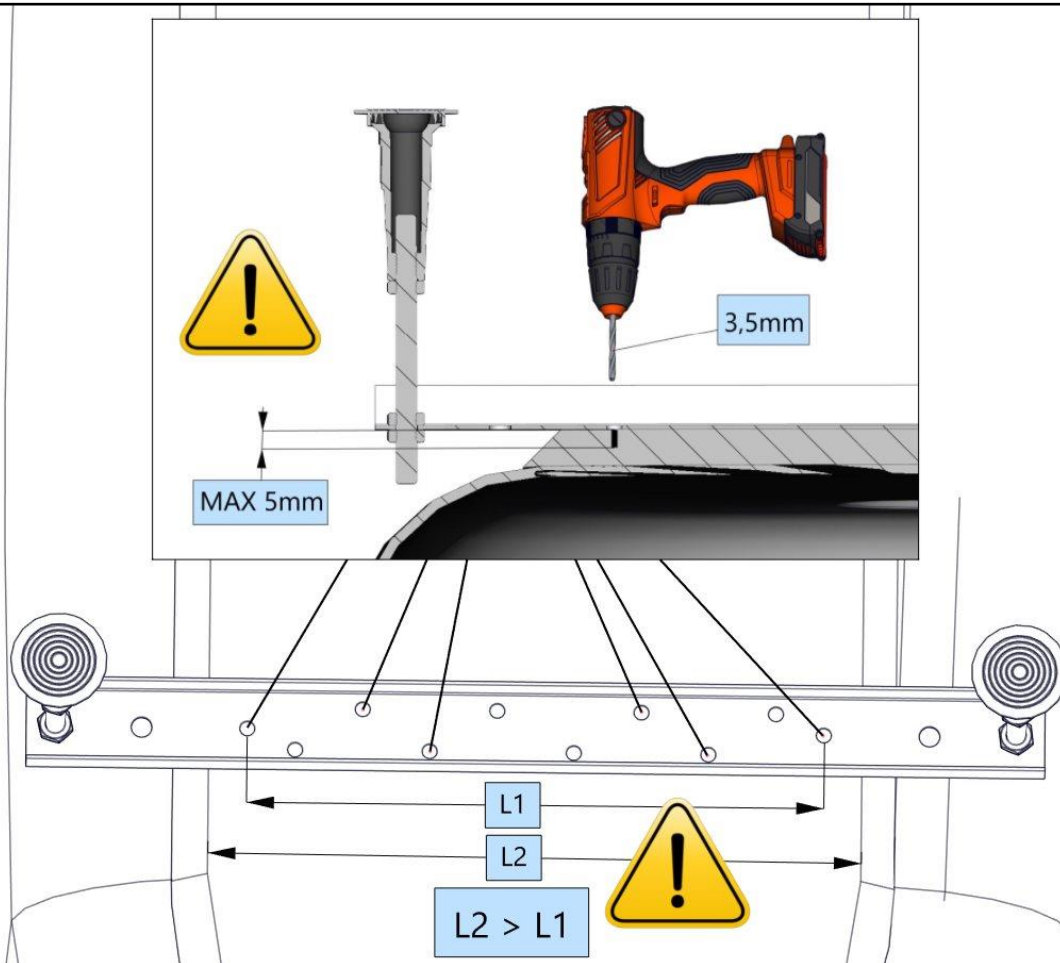




6B

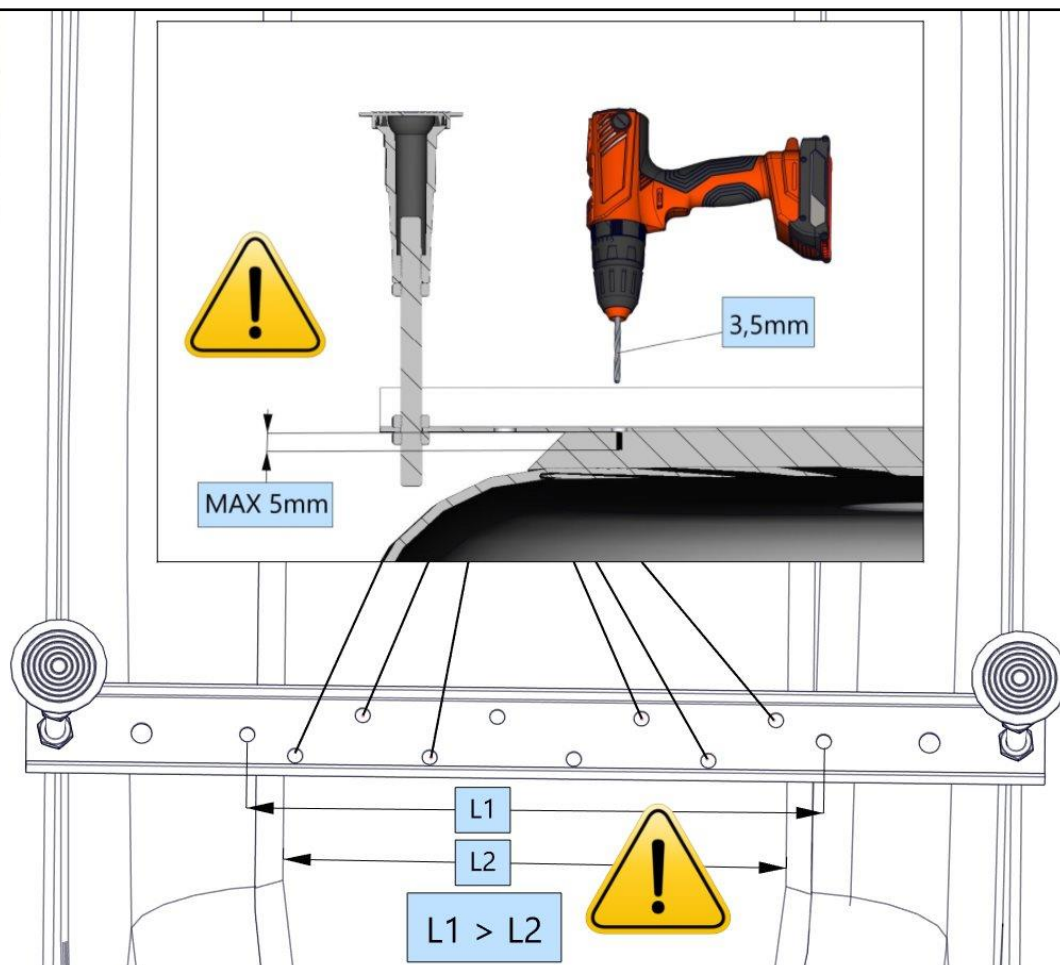




7

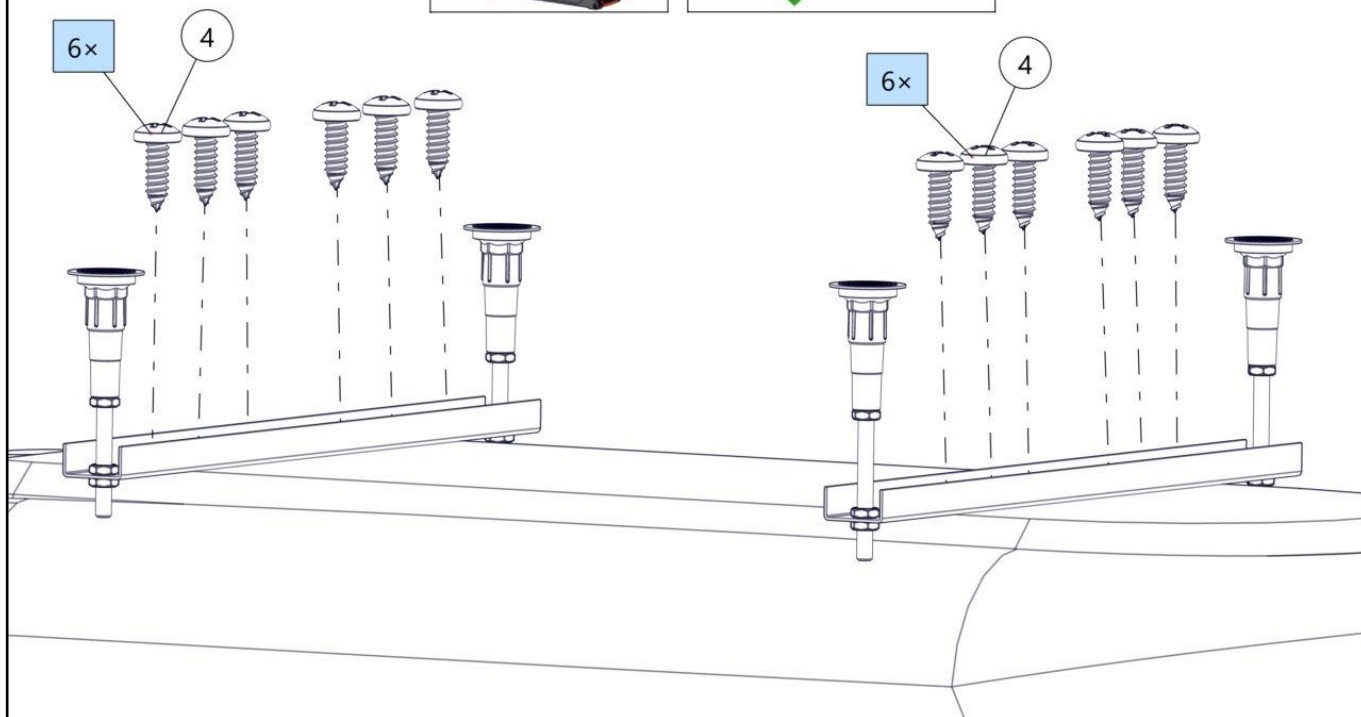


8A

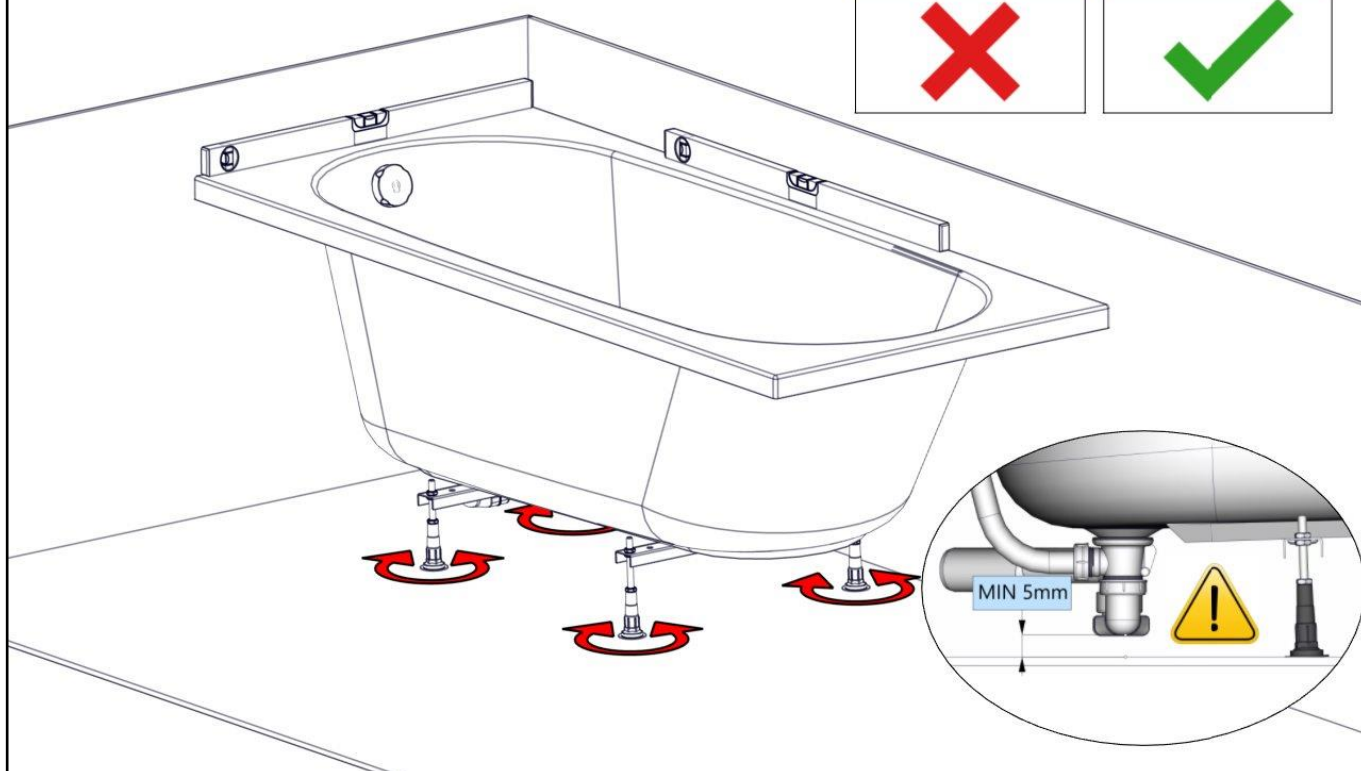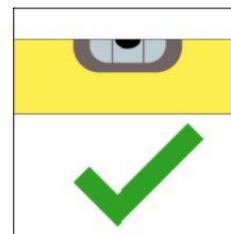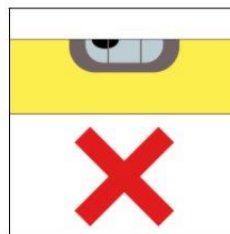

8B

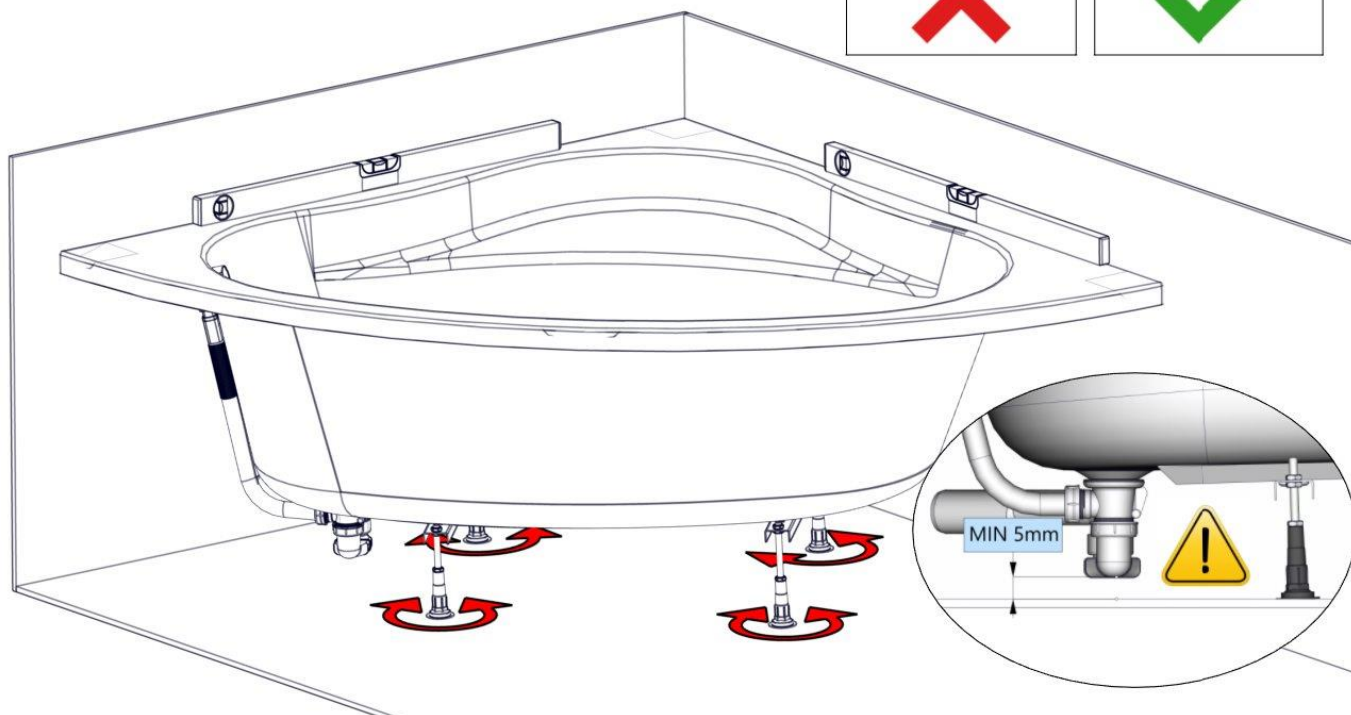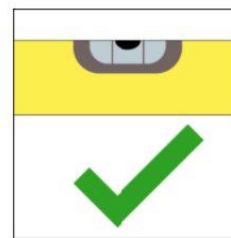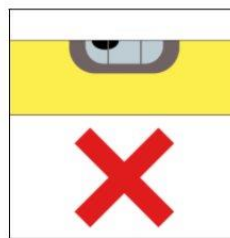


9


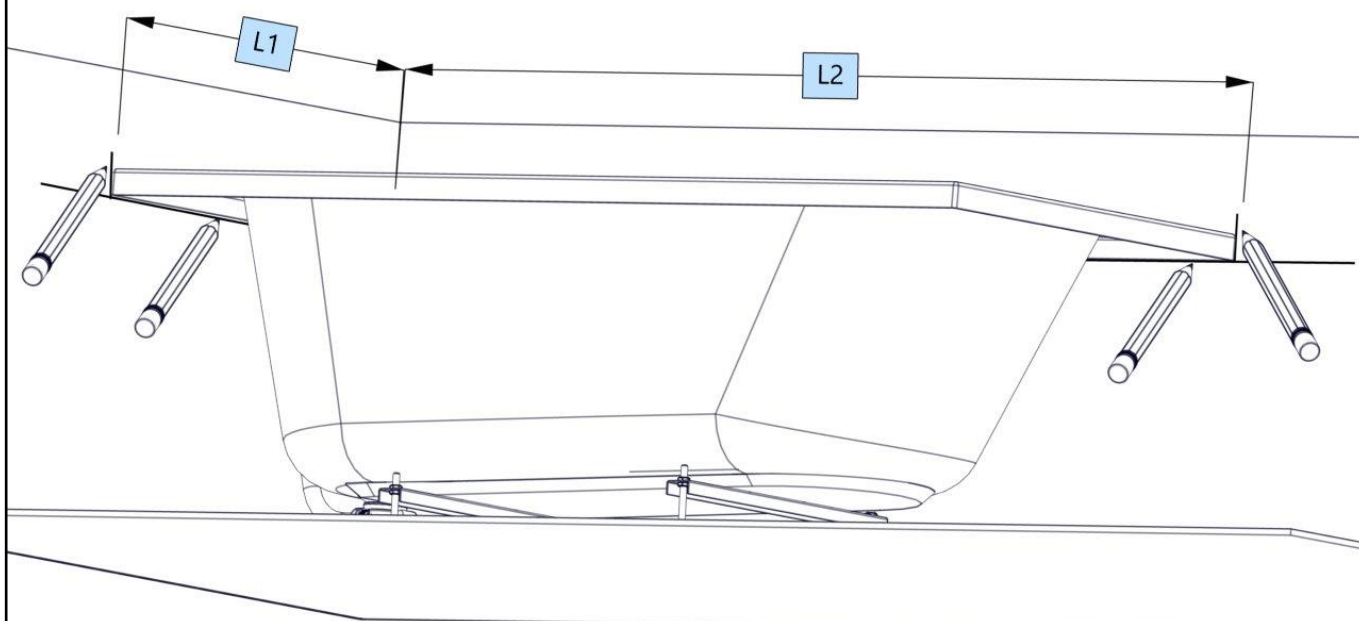


10


L3 = 200mm

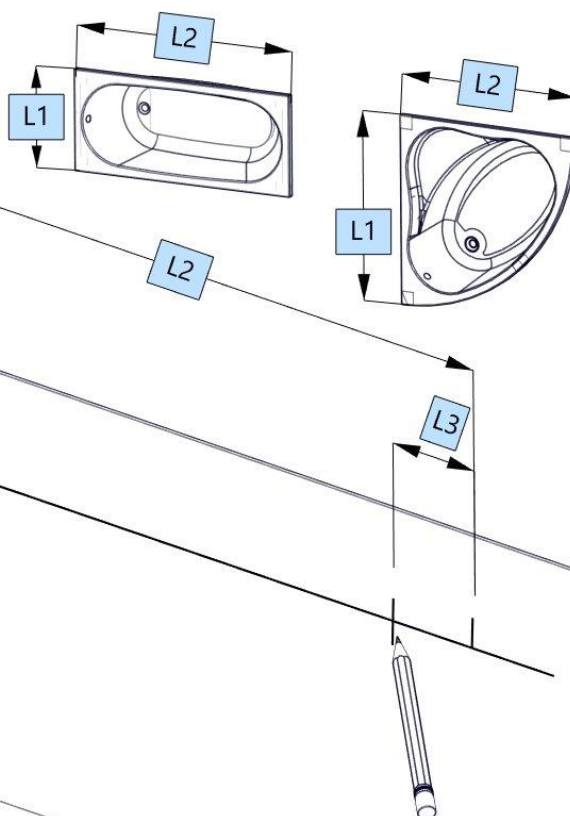

11

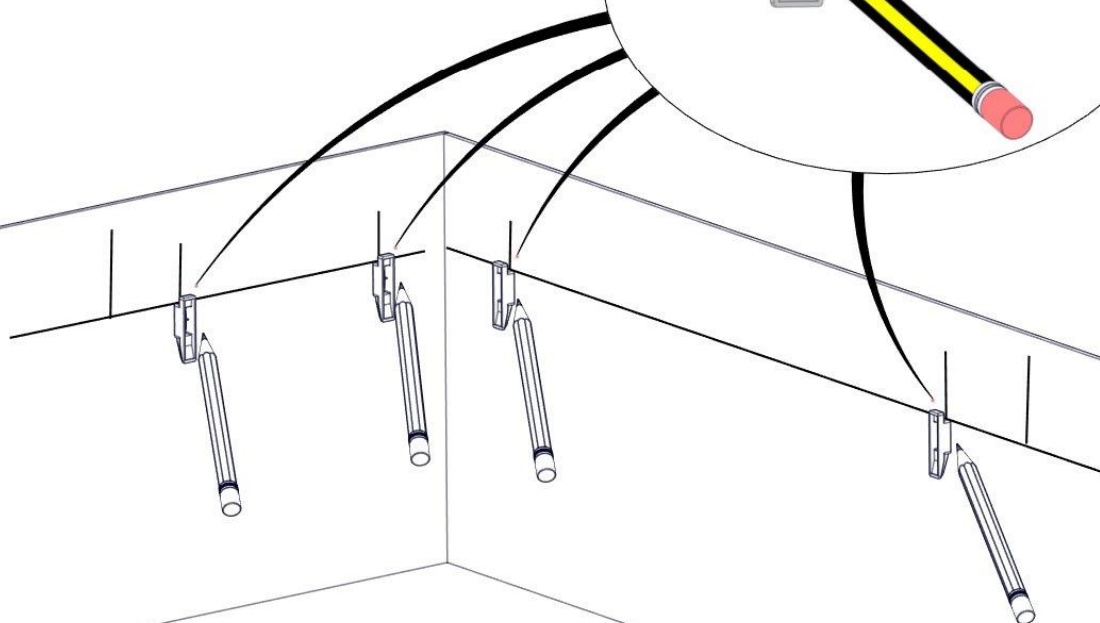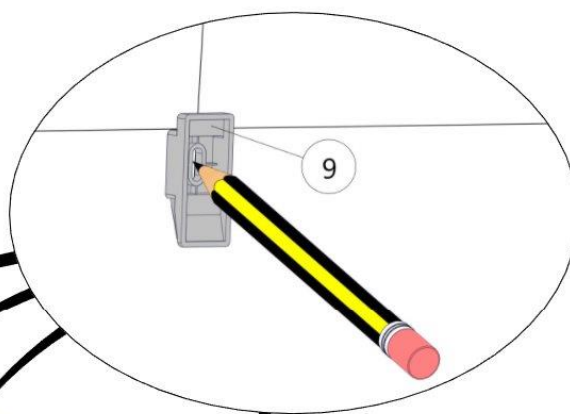

12

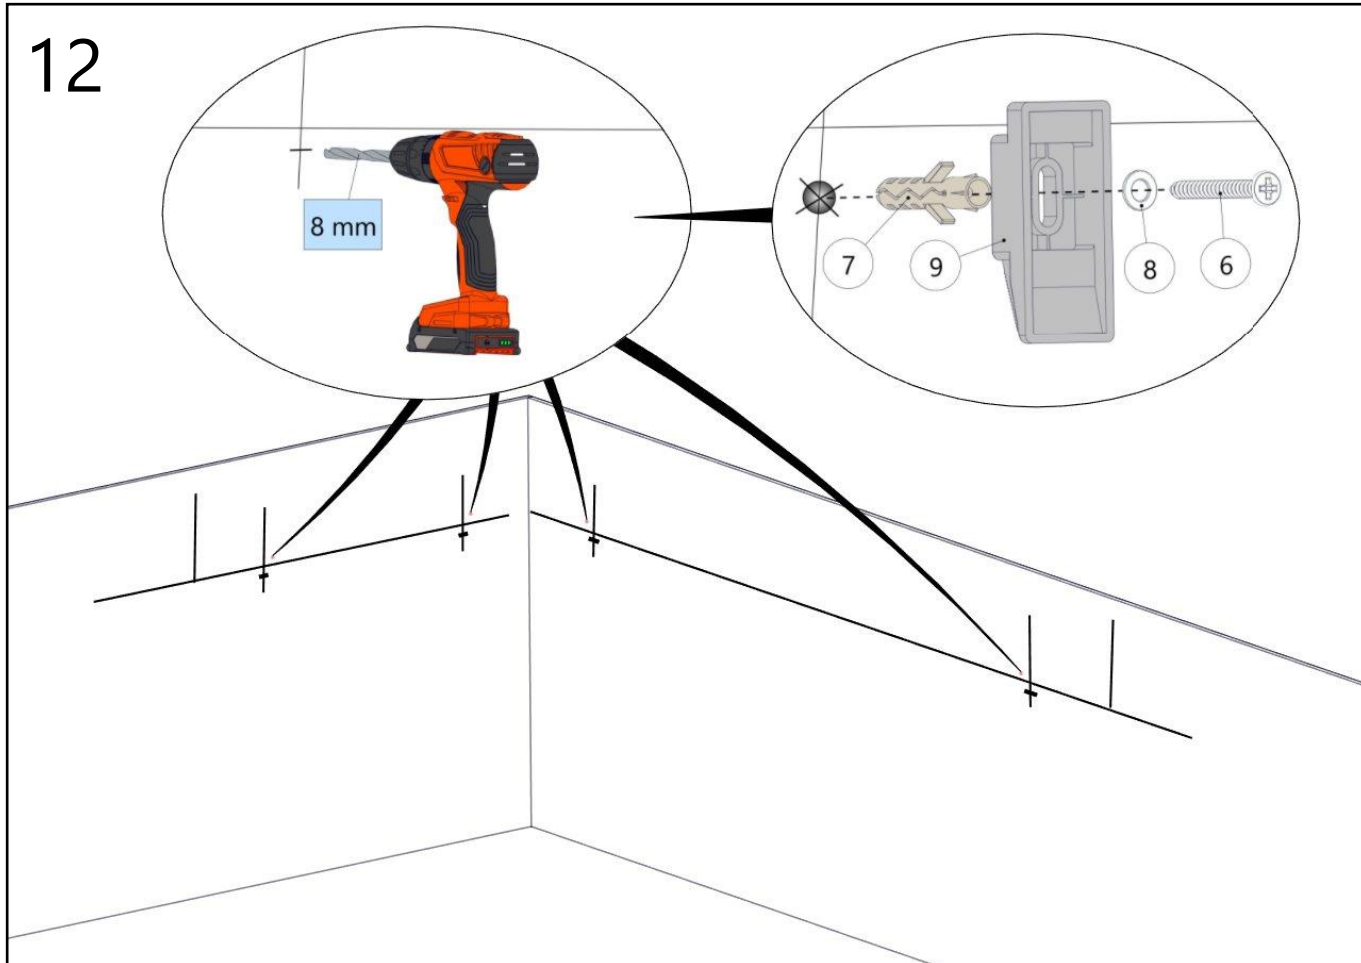

13

